

# Shark Screens

Ultimate Safety Barrier System

## Installation Guide



**Shark Screens**  
Ultimate Safety Barrier System.

# Overview

Shark Screen is the only system that spans 2 meters in height! Its simple installation process along with the lightweight components makes it effortless to incorporate into your safety practice. Our same day delivery and support means you can efficiently create a safer working site, giving you the time to get on with the job.

## KEY BENEFITS

**100%  
AUSTRALIAN**

**DECADES OF  
EXPERIENCE**

**EASILY  
INSTALLED**

# History

Our staff at Shark Screens Pty Ltd, have decades of experience working on commercial projects and first hand understand the objectives of both the builders and sub contractors. We have created the Ultimate Safety Barrier System to deliver a safer and more efficient solution.

# Step One

- 1 Position the stanchion at the live edge
- 2 Anchor x2 screws on the base in the holes provided (screw type: M12x100)



# Step Two


- 1** Slide the timber kickboard into the anchor point of the upright stanchion (as shown)



# Step Three


1

Place the next stanchion at a distance of 1.5 metres and anchor the base

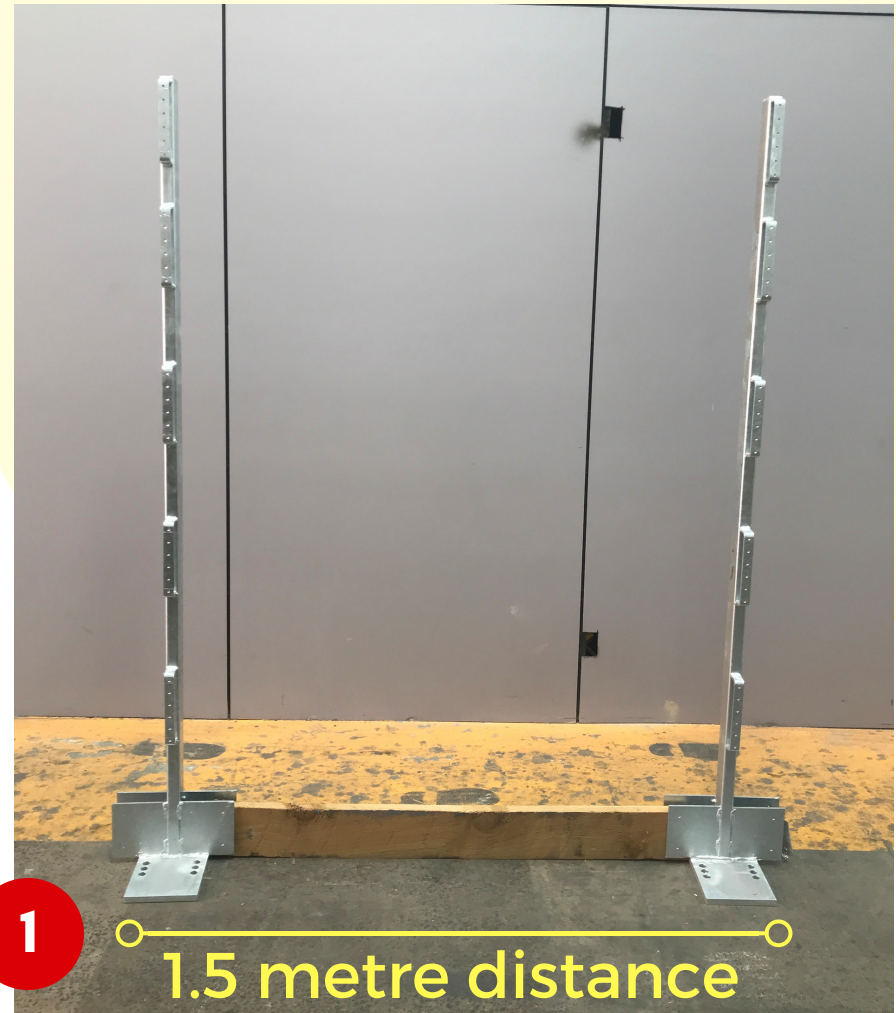

# Final Step

Slide all five metal handrails into each slot and overlap each side by 25cm

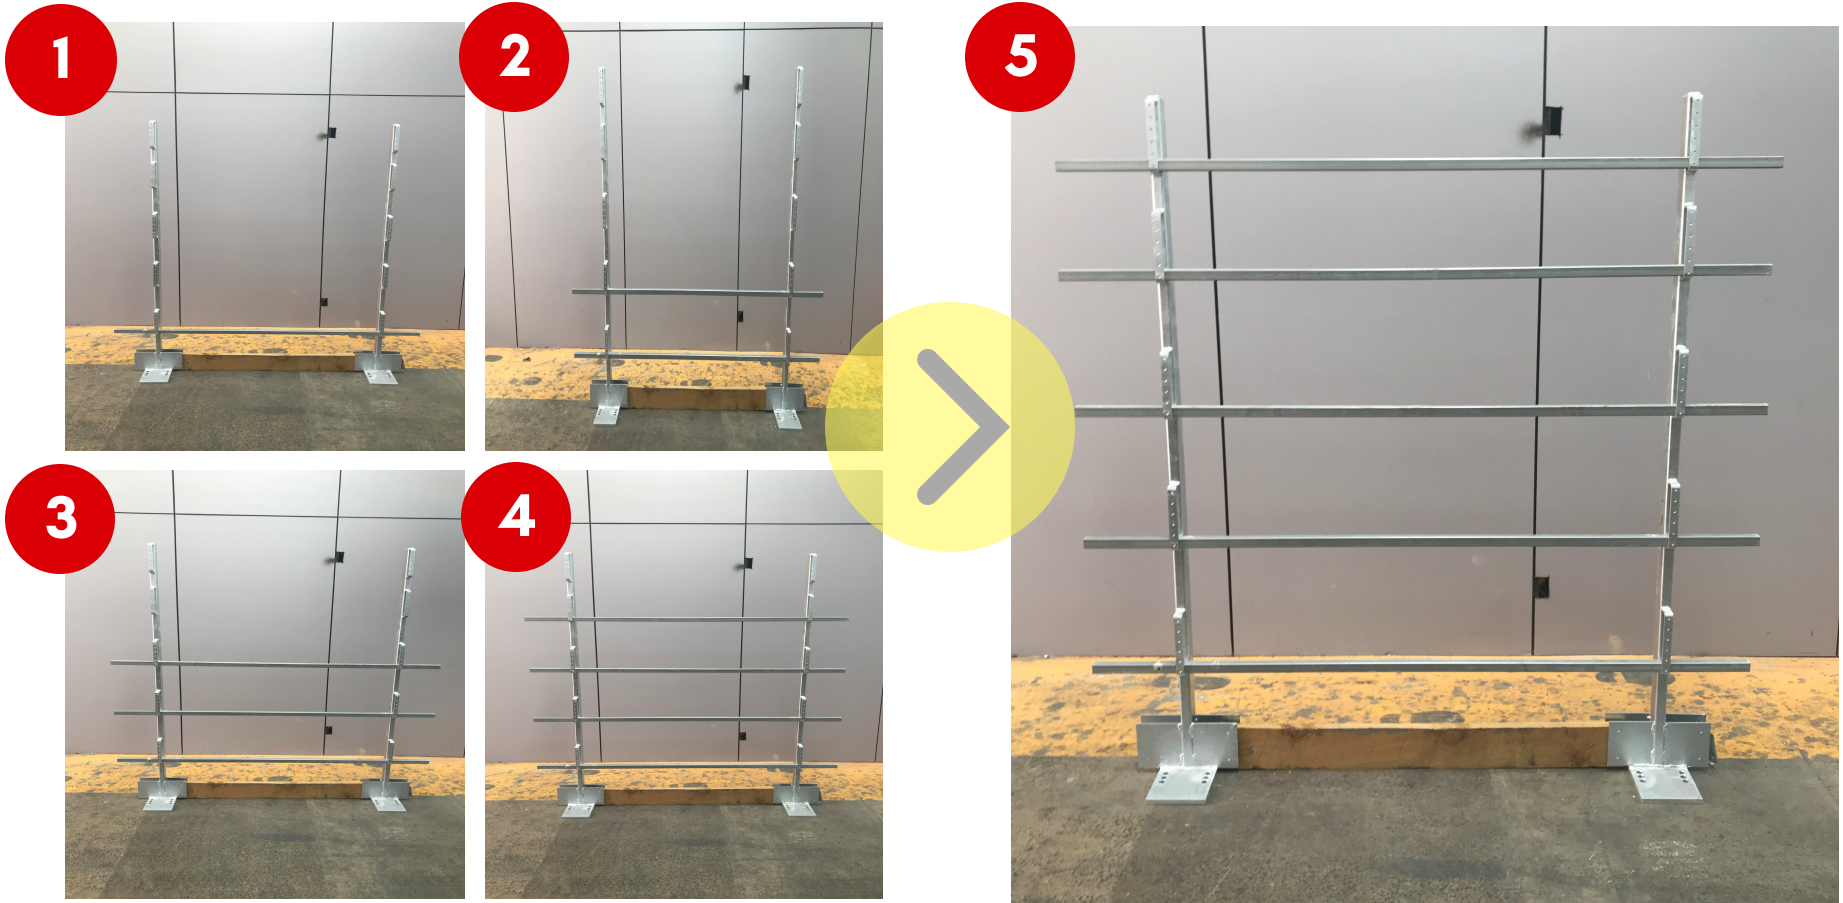

# FAQs

## Q: How do I position stanchions in corners?

Shark Screens Stanchions have been manufactured and designed for all scenarios. In the pictures provided, we have shown how if you angle the stanchions, they can easily be used for



# THANK YOU!

For more information please contact us

1800 759 731

[info@sharkscreens.com.au](mailto:info@sharkscreens.com.au)

